

VIN#

LEFT CONSOLE PANEL

- 1 Kidde Fire Button
- 2 Cup Holder
- 3 Mirror Adjustment
- 4 Parking Brake Control
- 5 USB Socket
- 6 12v Power Plug
- 7 Microphone Socket
- 8 Aux Brake Cut-Out
- 9 Emergency Cut-Out Switch
- 10 Park Brake Emergency Release

DOOR CONTROLS



- 1 (Option)
- 2 Entry Door Emergency Air Release



CONTROL PANEL IN ENGINE COMPARTMENT (CX35 ONLY)

- 1 Start Engine Button
- 2 Stop Engine Button
- 3 Force Regeneration
- 4 Regeneration Inhibit
- 5 24V Socket



CONTROL PANEL IN ENGINE COMPARTMENT (CX45 ONLY)

- 1 Start Engine Button
- 2 Stop Engine Button
- 3 Force Regeneration
- 4 Regeneration Inhibit
- 5 Toilet Tank Dump Valve
- 6 Waste Tank Dump Valve

INTERIOR WHEELCHAIR LIFT COMPARTMENT



- 1 Lift Lighting
- 2 Lift Door Emergency Air Release Knob
- 3 Lift Door Emergency Handle
- 4 Belt Cutter

WHEELCHAIR LIFT



MANUAL BYPASS KNOBS

- 1 In
- 2 Out
- 3 Up
- 4 Down
- 5 Power
- 6 Switch



CONTROL PENDANT

- 1 Up
- 2 Down
- 3 Stow
- 4 Deploy

This guide applies to Van Hool CX models, year 2026 and newer. Vehicle specifications subject to change without notice. All information, illustrations, and specifications contained in this guide are based on the latest product information available at the time of production. The right is reserved to make changes at any time without notice. Please refer to all owner, operations, maintenance, or parts manuals and associated documentation for further information.

ABC FLEETASSIST | 24/7 SUPPORT

VEHICLES | PARTS | SERVICE | SUPPORT

877-427-7278 | www.abc-companies.com



CX35 | CX45

DRIVER'S GUIDE

LEFT HAND DASHBOARD

- 1 (Option)
- 2 (Option)
- 3 ACC (Option)
- 4 Transmission Shift Pad
- 5 CMS (Option)
- 6 LDW On/Off Switch
- 7 Master Switch
- 8 Start Button
- 9 ASR (Traction Control)



COMBINATION SWITCH ON STEERING COLUMN

- 1 Turn Signal, High/Low Beam Lever
- 2 Windshield Washer
- 3 Horn
- 4 Windshield Wiper Control



DRIVER'S FLOORBOARD AREA

- 1 Steering Column Adjustment



SMART WHEEL

- 1 Cruise Control
- 2 Flash High Beam Headlights
- 3 Engine Brake Settings



CENTER INSTRUMENT PANEL

- | | |
|--------------------------------------|---------------------------------|
| 1 Left Turn Signal ● | 16 Alternator ● |
| 2 Parking Brake ● | 17 Air Pressure Aux Tank |
| 3 Collision Warning ● | 18 High Exhaust Temp. Warning ● |
| 4 High Beams ● | 19 Master Switch |
| 5 Electronic Stability Control (ESC) | 20 Fault Retarder ● |
| 6 Stop Lamp ● | 21 Speedometer |
| 7 Malfunction Indicator Lamp ● | 22 Engine RPM |
| 8 Anti-Lock Brakes ABS Stop ● | 23 Tank Pressure |
| 9 Engine Warning ● | 24 Oil Pressure |
| 10 Brake Wear Sensor ● | 25 Coolant Temp |
| 11 Right Turn Signal ● | 26 DEF Level |
| 12 Headlights On | 27 Fuel Level |
| 13 Door State ● ● | |
| 14 Adaptive Cruise Control Warning | |
| 15 Baggage Door Open | |

COMMON WARNING LIGHT INDICATORS



Turns green when all doors are closed. If front door is closed but still red, check wheelchair doors.



Malfunction Indicator Lamp for emissions. May stay on until a full drive cycle is completed, even with no active codes.



Pressing the button turns fans to high speed, even if defroster is off. Fans slow gradually when turned off.



Hill-hold/interlock. Automatically engages at startup. Tap throttle to disengage.



The line underneath represents an open switch. As long as the master switch is on and the symbol is green, everything is operating normally.



RIGHT SWITCH PANEL

- | | |
|--|--------------------------------|
| 1 Door Open/Close | 20 Driver's Light |
| 2 Luggage Bay Lock | 21 Reading Light |
| 3 Safety Media Player (Option) | 22 Passenger Lighting |
| 4 Kneeler | 23 Passenger Night Light |
| 5 Rear Raising | 24 RGB Ambient Lights (Option) |
| 6 Full Lift and Lower | 25 Fire System Mute and Delay |
| 7 Tag Axle Unload | 26 Luggage Bay Light |
| 8 Hazard Warning Signal | 27 REI Radio Control Unit |
| 9 Driver's Fan Speed & Temperature Control | 28 SmarTire Monitor |
| 10 AC On/Off Switch | 29 12V Adapter Charge Port |
| 11 Passenger Temperature Control | 30 USB Adapter Charge Port |
| 12 Passenger Recirculate Switch | 31 Auxiliary Heater On/Off |
| 13 (Option) | 32 (Option) |
| 14 Exterior Lights | 33 Pass. SOS Alarm On/Off |
| 15 Fog Lamps | 34 Wheelchair On/Off |
| 16 Cornering Lamps | 35 120V AC On/Off |
| 17 Sidewalk Lighting | 36 High Idle On/Off |
| 18 Left Driver's Sunshade | 37 Engine Override |
| 19 Right Driver's Sunshade | 38 (Option) |

ABC FLEETASSIST | 24/7 SUPPORT

VEHICLES | PARTS | SERVICE | SUPPORT

877-427-7278 | www.abc-companies.com