

COACH MODEL : TX & CX


DATE : 4/1572021

SUBJECT : ADJUSTMENT OF DRIVERS SHADE LENGTH



Shade adjustment on TX model coaches requires 2 (two) technicians. CX model can be performed by one technician. Caution must be taken when reaching for the setting key on the motor head of the coach. When in programming mode be careful the shade will go past its mechanical limits and will be damage.

1. Turn on the coach's master power switch.
2. Locate the switch on the dash that operates the shade.
3. Locate the setting key on the motor head of the shade.
4. TX model: One technician will press shade button at shade motor head with a 1/8-inch drill bit, and continue to hold switch in.
5. Then the other technician holds the dash switch in the down position until the shade stops. Once the shade stops let go of both switches, alarm will sound approximately 5 beeps.
6. Then hold down the DOWN position on the shade switch on dash until the shade lowers to the desired length then release switch.
7. Then to set upper limit of the shade hold down the UP position on the shade switch on dash until the desired height is reach then release switch.
8. Then press the DOWN position on the shade switch on dash then alarm will sound approximately 5 beeps.
9. Programming mode is now off. No alarm sound should be heard from this point on.

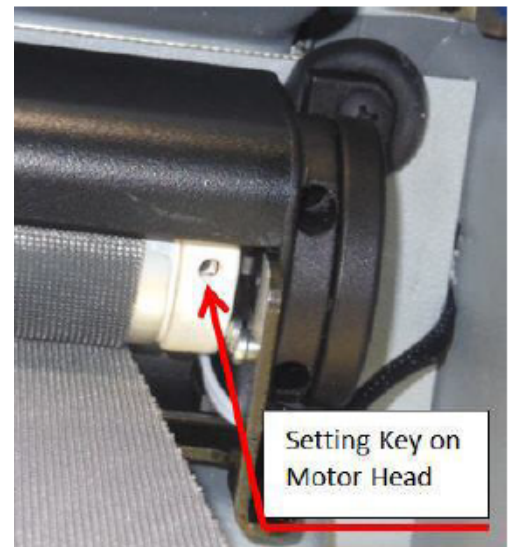

“The shade is now programmed to the desired upper and lower limit. Test the programming of the shade all the way to its lowest limit and raising it to the highest limit.”