

Water leaking in luggage bays right side.

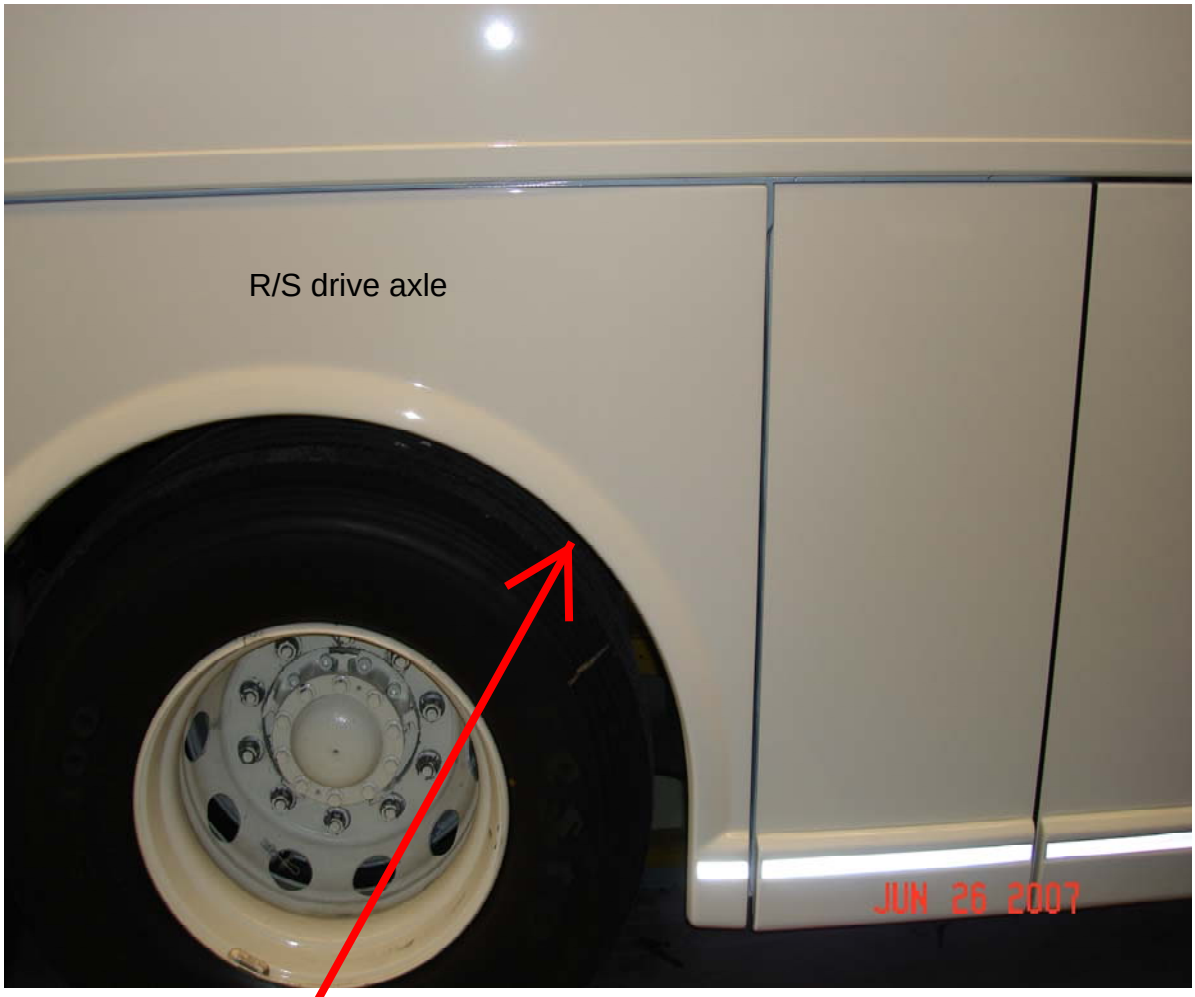

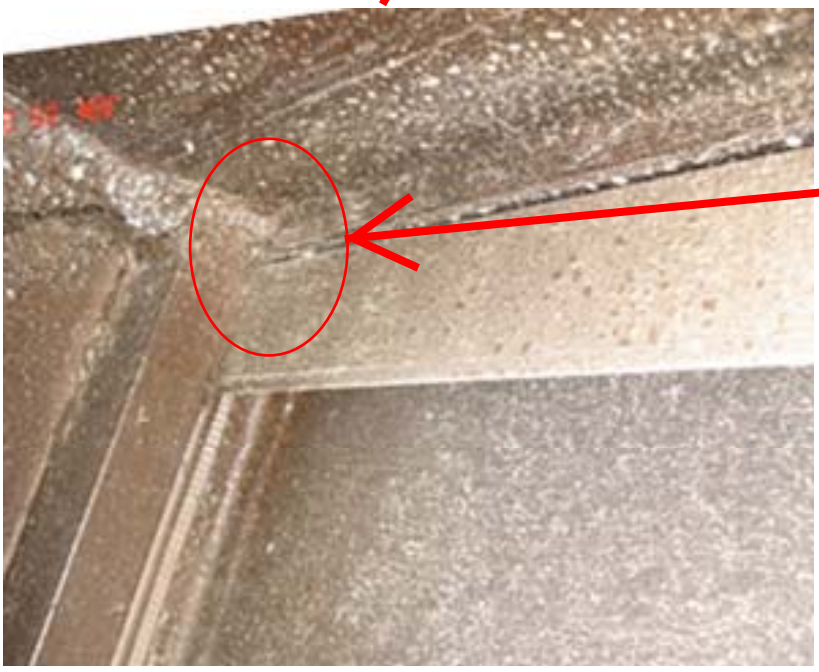

If the water is leaking into the luggage bay you will need to remove the wheel well cover and check to see if the channel in the top front corner of wheel well as shown it this picture is open with no sealer.

To repair the problem inject sealer into the channel, making sure to fill in the area.